



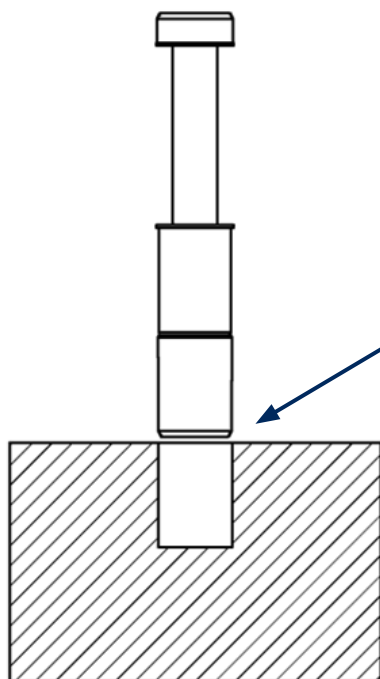


The good side of the limit gauge does not fit into the drill hole: the diameter is less than 50 mm.

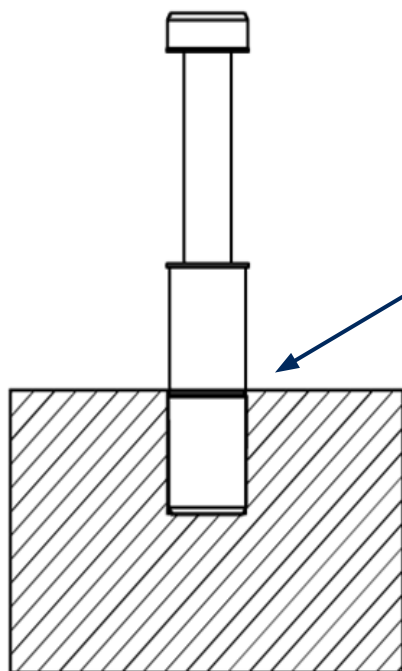


The good side of the boundary gauge fits into the drill hole: the diameter is more than 50 mm.



The first mark can be used to control the depth to 70 mm (pick), and the depth to the fret is 140 mm (pick max).

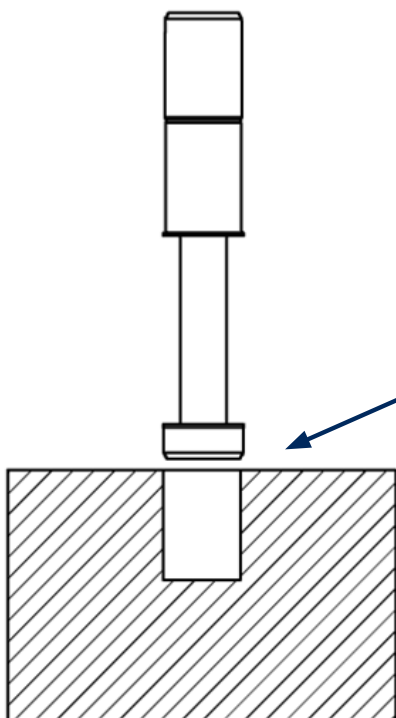

The plate side of the
boundary pin does not fit into
the drill hole: the diameter
is less than 51 mm.

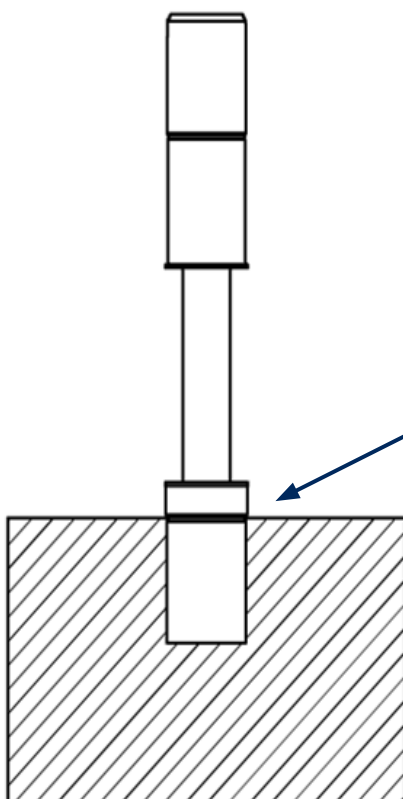

The flat side of the
border dowel fits into the
drill hole: the diameter is
more than 51 mm.



TAKE THE BEST

